


Wrong installing points for the MIB STD2 PQ of UA guide

► Step 4: Solder wires to the Panel PCB.

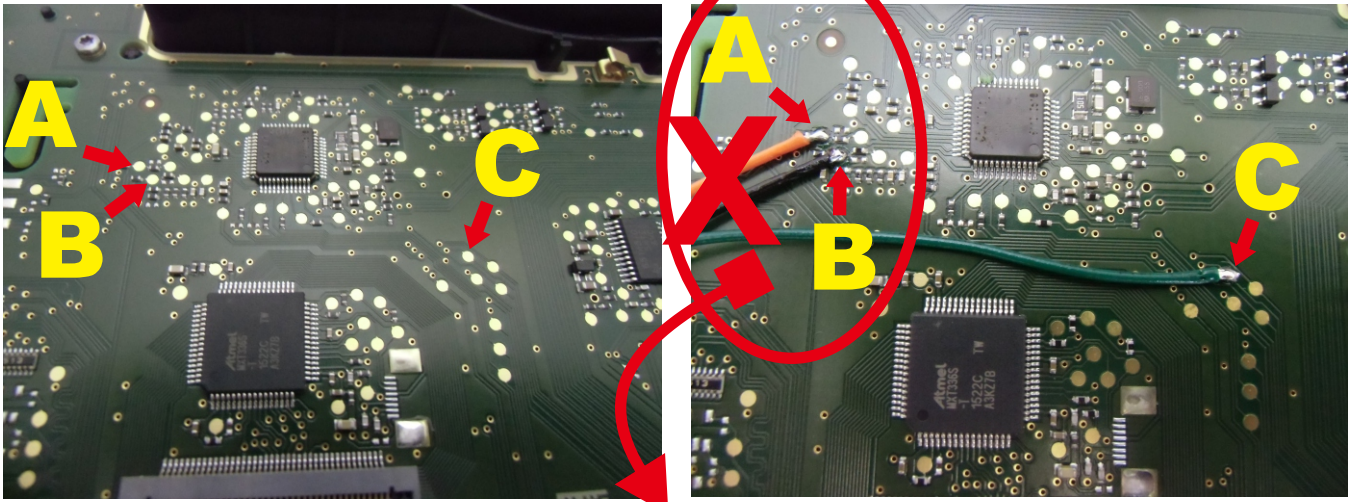

Solder the PQ-W1 wire of black wire to A point, orange wire to B point, green wire to C point on the Panel PCB.

Dear Mark and Aviel,

Sorry,,,,,We have found a wrong directing point in our MIB STD2 PQ of UA guide,,,,,

Please study the photo image above,,,,,,Please exchange the **orange wire** and the Black wire of soldering,,,,,,then, the touch function would be OK,

Please do the modification as mentioned and test the MIB STD2 PQ interface again.....

Please note that,,,and,,,,,SORRY for that mistake.



Sales Director

Johnson Chen

Date: 2018-Mar-05